
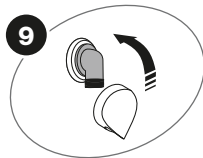
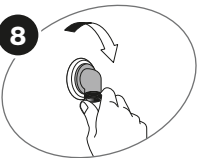
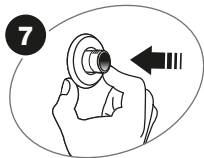
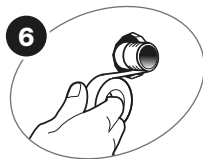
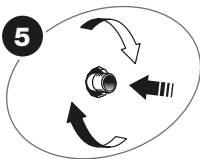
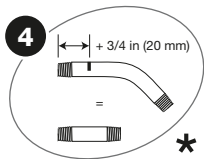
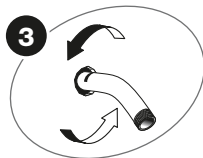
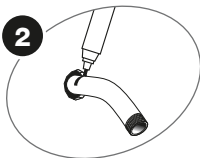


ShowerStore.com

Installation instructions for designer supply elbow.

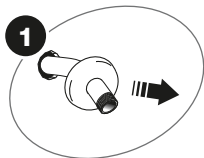

* Requires a 1/2 in. pipe nipple (not included) that is 3/4 in. longer than the mark made in Step 2.